

HADEN HMC28TCW INSTRUCTION MANUAL



Quick Links

[Auto Defrost](#)

Table of Contents

Table of Contents

SAFETY INFORMATION

SAFETY INSTRUCTIONS

PRECAUTIONS

IMPORTANT SAFEGUARDS

INSTALLATION GUIDE

GROUNDING INSTRUCTIONS

RADIO INTERFERENCE

Cooking Utensils Guide

Product OVERVIEW

Control Panel

HOW TO USE YOUR MICROWAVE

SETTING THE TIME

SETTING THE CLOCK

QUICK START

MICROWAVE FUNCTION

GRILL FUNCTION

MICROWAVE+GRILL

CONVECTION

COOKING WITH CONVECTION

MICROWAVE+CONVECTION

MULTI-STAGE COOKING

AUTO DEFROST

AUTO COOK

CHILD LOCK

PROTECTION

CLEANING AND MAINTENANCE

WASTE ELECTRICAL RECYCLING

WARRANTY

TECHNICAL SPECIFICATION

TROUBLESHOOTING

Other ManualsLib Projects

INSTRUCTION MANUAL



PRODUCT CODE: 199041 / 199102



HMC28TCW / HMC28TCS

25L Combination Microwave



How can we help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us
01909 544 570



Email us
info@hadenappliances.com



Write to us
**Team Haden, Sabichi Homewares Ltd,
Priorswell Rd, Worksop, S80 2BY**



Visit us
www.haden.com

www.haden.com

CONTENTS

SAFETY INSTRUCTIONS	2
PRECAUTIONS	2
IMPORTANT SAFEGUARDS	2
INSTALLATION GUIDE	6
GROUNDING INSTRUCTIONS	7
RADIO INTERFERENCE	7
Cooking Utensils Guide	8
Product OVERVIEW	9
Control Panel	10
HOW TO USE YOUR MICROWAVE	11
SETTING THE TIME	11
QUICK START	12
MICROWAVE FUNCTION	12
GRILL FUNCTION	13
MICROWAVE+GRILL	13
CONVECTION	13
MICROWAVE+CONVECTION	15
MULTI-STAGE COOKING	15
AUTO DEFROST	16
AUTO COOK	16
CHILD LOCK	17
PROTECTION	17
CLEANING AND MAINTENANCE	18
WASTE ELECTRICAL RECYCLING	19
WARRANTY	20
TECHNICAL SPECIFICATION	21
TROUBLESHOOTING	21

SAFETY INFORMATION

Read these instructions carefully and completely before using your appliance and keep in a safe convenient place for reference when necessary.

PRECAUTIONS

1. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any dents)
 - b) Hinges and latches (broken or loosened)
 - c) Door seals and sealing surfaces
4. The oven should not be adjusted or repaired by anyone except qualified service personnel.

IMPORTANT SAFEGUARDS

1. Read all instructions before using the appliance and keep for future reference.
2. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

5. **WARNING!** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. **WARNING!** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated
7. To reduce the risk of fire in the oven cavity:
 - When heating food in plastic or paper container, check the oven frequently to reduce the risk of ignition.
 - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, injury, ignition or fire.
8. **WARNING!** Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.

12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING!** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The microwave oven is only used in freestanding.
21. **WARNING!** Do not install oven over a range cook top or other heat-producing appliance. If installed could be damaged and the warranty would be void.

22. The microwave oven shall not be placed in a cabinet.
23. The door or the outer surface may get hot when the appliance is operating.
24. **WARNING!** Accessible parts may become hot during use. Young children should be kept away.
25. During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven, for cooking ranged and ovens.
26. The temperature of accessible surfaces may be high when the appliance is operating.
27. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
28. **WARNING!** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
29. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The microwave oven is for household use only and not for commercial use.
31. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
32. Please secure the turntable before you move the appliance to avoid damages.
33. **CAUTION!** It is dangerous to repair or maintain the appliance by anyone other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
34. The microwave oven is intended for defrosting, cooking and steaming of food only.

35. Use gloves if you remove any heated food.
36. **Caution!** Steam will escape, when opening lids or wrapping foil. supervised.
37. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
38. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

INSTALLATION GUIDE

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING!** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.

7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING! Improper use of the grounding plug can result in a risk of electric shock. Note:

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH Blue = NEUTRAL Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

COOKING UTENSILS GUIDE


1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommended, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.


Cookware	Microwave	Grill	Convection	Combination*
Heat-Resistant Glass	Yes	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No	No
Kitchen Paper	Yes	No	No	No
Metal Tray	No	Yes	Yes	No
Metal Rack	No	Yes	Yes	No
Aluminum Foil & Foil Container	No	Yes	Yes	No

*Combination: applicable for both 'microwave+grill', and 'microwave+convection' cooking.

OVEN & HOB CONTROLS

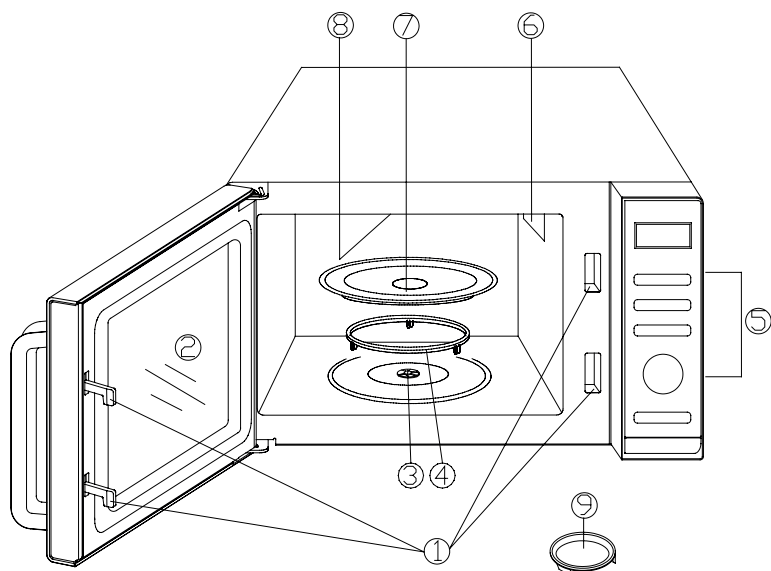

1. Door Safety Lock System
2. Oven Window
3. Shaft
4. Roller Ring
5. Control Panel
6. Wave Guide (Please do not remove the mica plate covering the wave guide)
7. Glass Tray
8. Grill Heater
9. Baking Plate

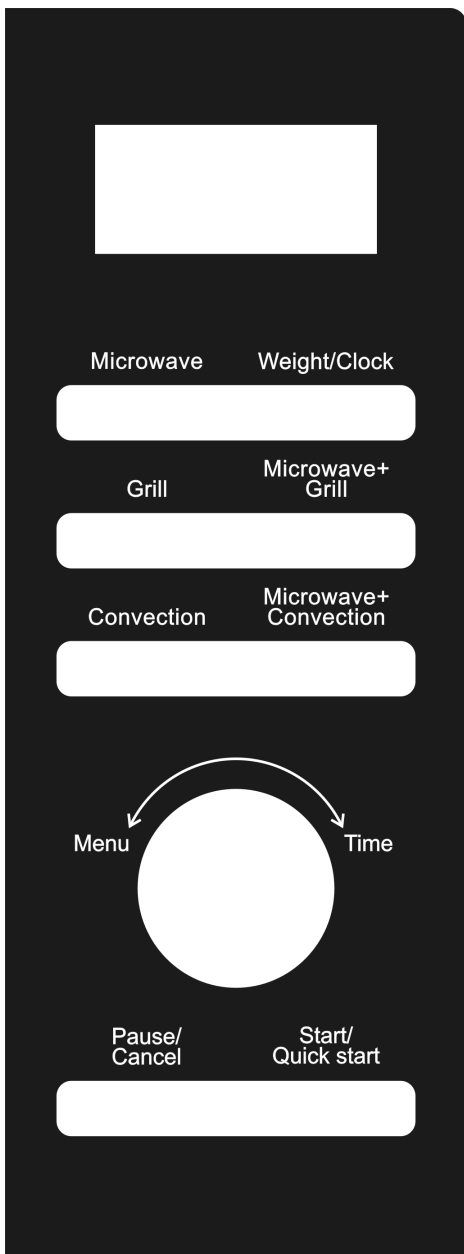

- **MENU ACTION SCREEN**
Cooking time, power, action indicators, and clock time are displayed.
- **MICROWAVE**
Press this button a number of times to set microwave cooking power level.
- **WEIGHT/CLOCK**
Press to set clock time.
Press to specify food weights or number of servings.
- **GRILL**
Press to set grill program.
- **MICROWAVE+GRILL**
Press to set combination program.
- **CONVECTION**
Press to program convection temperature.
- **MICROWAVE +CONVECTION**
Press to select one of four combination cooking settings
- **PAUSE/CANCEL**
Press to cancel setting or reset the oven before setting a cooking program.
Press once to temporarily stop cooking, or twice to cancel cooking altogether.
- **MENU/TIME(KNOB)**
Turn the knob to enter time.
Turn the knob to select an auto cook menus.
- **START/QUICK START**
Press once to start a cooking program.
Simply press it a number of times to set cooking time and cook immediately at full power level.

HOW TO USE YOUR MICROWAVE

- When the oven first plugged in, a beep will sound and the display will show "1:01" and "".
- During cook setting mode, the system will return to standby mode if there is not any operation within 25 seconds.
- During cooking program, touch **PAUSE/CANCEL** button once to pause the program, then touch **START/QUICK START** button to resume. Touch **PAUSE/CANCEL** button twice to cancel the program.
- After ending cooking, the screen will display End with sound every two minutes until user touch **PAUSE/CANCEL** button or open the door.
- The electronically controlling system of the microwave oven has the feature of cooling. As for any cooking mode which cooking time above 2 minutes, opening the door or stopping state, the oven fan will work about 3 minutes automatically to cool the oven for prolonging the life of the oven.

SETTING THE CLOCK

This is a 12 or 24 hour clock. You can choose to set the clock time in 12 or 24 hour cycle by pressing the **WEIGHT /CLOCK** button in standby mode.

FOR EXAMPLE: Suppose you want to set the oven clock time to 8:30.

1. Press **WEIGHT/CLOCK** button once or twice to select 12 or 24 hour clock cycle.
2. Turn **MENU/TIME** knob to set hour digit 8.
3. Press **WEIGHT/CLOCK** button once to confirm the hour setting.
4. Turn **MENU/TIME** to set minute digit 30.
5. Press **WEIGHT/CLOCK** button once to confirm the setting.

NOTE: During cooking, you can check the current time by pressing the **WEIGHT/CLOCK** button.

QUICK START

Use this feature to program the oven to start at 100% power. The max time can be set is 10 minutes.

1. In standby mode, open the door and place the food into the oven, close it.
2. Touch **START/QUICK START** in quick succession to set the cooking time. The oven will auto-start immediately.

MICROWAVE FUNCTION

For microwave cooking, just press the MICROWAVE button a number of times to select a cooking power level, and then use the MENU/TIME knob to set a desired cooking time. The longest cooking time is 95 minutes. The oven will start to cook after START/QUICK START button is pressed.

Press MICROWAVE button	COOKING POWER
once	100%
twice	80%
3 times	60%
4 times	40%
5 times	20%
6 times	0%

For example, suppose you want to cook for 10 minute at 60% of microwave power.

1. Press the **MICROWAVE** button 3 times to set it to 60%.
2. Press **MICROWAVE** button then COOKING POWER
3. Turn **MENU/TIME** knob to 10:00.
4. Press **START/QUICK START** to confirm.

NOTE: During cooking, you can check the power level by touching MICROWAVE pad.

GRILL FUNCTION

The oven allows you to grill food based on the time entered by user. The longest cooking time is 95 minutes

- 1. In standby mode, press **GRILL** button once.
- 2. Turn **MENU/TIME** knob to enter cook time.
- 3. Press **START/QUICK START** to confirm.

MICROWAVE + GRILL FUNCTION

The longest cooking time is 95 minutes. This feature allows you to combine grill and microwave cooking on two different settings. Suppose you want to set combination cooking for 25 minutes.

- 1. In standby mode, open the oven door and place the food, close it.
- 2. Press **MICROWAVE+GRILL** button once or twice.
- 3. Turn **MENU/TIME** knob to enter cook time.
- 4. Press **START/QUICK START** to confirm.

Touch MICROWAVE+GRILL button	Combination	Cooking time	
		Microwave	Grill
Once	Co-1	30%	70%
Twice	Co-2	55%	45%

CONVECTION

During convection cooking, hot air is circulated throughout the oven cavity to brown and make crisp foods quickly and evenly. This oven can be programmed for ten different cooking temperatures Maximum cooking time for convection is 95 minutes.

COOKING WITH CONVECTION

To cook with convection, press Convection button repeatedly to enter the desired convection temperature. **200°C → 190°C → 180°C → 170°C → 160°C → 150°C → 140°C → 130°C → 120°C → 110°C**

Suppose you want to cook at 180°C for 40 minutes.

1. In standby mode, open the door and place the food into the oven, close it.
2. Press **CONVECTION** button repeatedly to select cooking temperature as shown on screen.
3. Turn **MENU/TIME** knob to enter cooking time.
4. Press **START/QUICK START** button to start.

NOTE: During cooking you can check the temperature by pressing CONVECTION pad.

PREHEAT & COOKING WITH CONVECTION

Your oven can be programmed to combine preheating and convection cooking operations.

Suppose you want to preheat to 170°C and then cook 35 minutes.

1. In standby mode, press **CONVECTION** button repeatedly to select cooking temperature as shown on screen.
2. Press **START/QUICK START** button. Beeps will sound when the designated temperature is reached.
3. Open the door and place container of food at the center of the turntable.
4. Turn **MENU/TIME** knob to enter cooking time.
5. Press **START/QUICK START** to start.

NOTE: There is a short sound every 5 seconds for 30 minutes. If not open the oven door, in the 30 minutes program automatically End. The longest preheat time is 30 minutes, and the preheat time cannot be set.

MICROWAVE + CONVECTION

This oven has four pre-programmed settings that make it easy to cook with both convection heat and microwave automatically. Press **MICROWAVE+CONVECTION** button repeatedly to program convection temperature **200°C → 170°C → 140°C → 110°C**. Then use **MENU/TIME** knob to enter cooking time, the longest cooking time you can set is 95 minutes. The oven will start to cook after **START/QUICK START** button is pressed.

Suppose you want to cook for 24 minutes on 170°C.

1. In standby mode, open the door and place the food into the oven, close it.
2. Press **MICROWAVE+CONVECTION** button repeatedly to select cooking temperature as shown on screen.
3. Turn **MENU/TIME** knob to enter cooking time.
4. Press **START/QUICK START** to confirm.

NOTE: During cooking you can check the combination power level by pressing **MICROWAVE+CONVECTION** button.

MULTI-STAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences. Suppose you want to set the following cooking program.

MICROWAVE → GRILL → CONVECTION

1. Open the door and place the food into the oven, close it.
2. Input Microwave cooking program.
Do not touch **START/QUICK START** button.
3. Input Grill cooking program.
Do not touch **START/QUICK START** button.
4. Input Convection cooking program.
5. Press **START/QUICK START** to start.

NOTE: Auto Cook Menus, Auto Defrost and Quick Start cannot be set in a multi-stage cooking program.

AUTO DEFROST

The oven allows you to defrost food based on the weight entered by user. The defrosting time and power level are automatically set once the food category and the weight are programmed. The frozen food weight ranges from 100g to 1800g.

1. In standby mode, turn the **MENU/TIME** dial anti-clockwise until "AUTO","A-9" display in the screen.
2. Press **WEIGHT/CLOCK** repeatedly to select weight of food.
3. Press **START/QUICK START** to confirm.

NOTE: During defrosting program, the system will pause and sound beeps to remind user to turn food over, and then press **START/QUICK START** to defrost for the remaining time.

AUTO COOK MENUS

For food or the following cooking mode, it is not necessary to program the time and the cooking power. It is sufficient to indicate the type of food that you want to cook as well as the weight or shares of this food.

4. In standby mode, turn **MENU/TIME** knob anti-clockwise to select food code to specify the food
5. Press **WEIGHT/CLOCK** button a number of times to indicate the desired weight.
6. Press **START/QUICK START** button.

Code	Food	Note
A-1	POTATO(230g/each)	1. The result of auto cook depends on factors such as the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the oven. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly. 2. For BEVERAGE and POTATO parameters on display are not weight but number of servings. 3. For CHICKEN, the oven pauses and beeps during cooking to remind you to turn food over for uniform cooking.
A-2	BEVERAGE (230ml/cup)	
A-3	POPCORN (99g)	
A-4	AUTO REHEAT (g)	
A-5	SPAGHETTI (g)	
A-6	PIZZA (g)	
A-7	CHICKEN (g)	
A-8	CAKE (g)	

CHILD LOCK

Use to prevent unsupervised operation of the oven by little children. The CHILD LOCK indicator will show up on display screen, and the oven cannot be operated while the CHILD LOCK is set.

1. To set the **CHILD LOCK**: In standby mode, if no operation in one minute, the system will automatically activate child lock function and lock indicator lights.
2. To cancel the **CHILD LOCK**: Lock indicator on display goes off and system resume when open or close the oven door.

PROTECTION

OVERHEATING PROTECTION

When the system enters into super high temperature protection status, the digital display shows "E01" and continues to beep until troubleshooting, then press "**PAUSE/CANCEL**", the system comes back to normal standby mode.

LOW TEMPERATURE PROTECTION

When the system enters into super low temperature protection status, the digital display shows "E02" and continues to beep, then press "**PAUSE/CANCEL**", the system comes back to normal standby mode.

SENSOR MALFUNCTION PROTECTION

The system enters into protection mode when the system sensor is Short Circuited. The display shows "E 03" and continues to beep, then press "**PAUSE/CANCEL**", the system comes back to normal standby mode.

CLEANING AND MAINTENANCE

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
10. Remove odours from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. If the light bulb burns out, please contact customer service to have it replaced.

12. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
13. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
14. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon, because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odor generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

WASTE ELECTRICAL RECYCLING



This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste. The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- to recycle waste electrical products using the best available recovery and recycling techniques in order.
- to minimise the impact on the environment
- to treat any hazardous substances and
- to avoid increasing landfill.

WEEE product should be disposed of by handing it over at a designated collection point.

For more information about where you can drop off your waste product for recycling please contact your local authority.

WARRANTY (UK & IRELAND ONLY)

This product is guaranteed for 2 years from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion. Proof of purchase will be required.

This warranty applies only to:

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK and Ireland.

This warranty does not cover:

- Cosmetic damage.
- Normal wear and tear or consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed serial numbers.

Haden disclaims any liability for incidental or consequential loss or damages.

In the event of a problem:

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting Haden please provide:

- Product model number and serial number. Model & serial numbers can be found on the product rating label.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

Help Line:	01909 544 570
Opening Hours:	Monday - Friday 9am – 5pm
Email:	info@hadenappliance.com

TECHNICAL SPECIFICATION

Product Code	199041 / 199102
Model Number	HMC28TCW / HMC28TCS
Power Supply	240V/50Hz
Power Consumption (Microwave)	1400W
Power Consumption (Grill)	1950W
Power Consumption (Convection)	1950W
Rated Microwave Output	900W
Operation Frequency	2450MHZ
Outside Dimensions	281 x 483 x 437mm
Oven Cavity Dimensions Capacity	220 x 340 x 344mm
Net Weight	25 L Approx 16kg

Please note these figures are for reference and may differ slightly on the actual product

TROUBLESHOOTING

Before asking for service, please check each item below:

- Check to ensure the microwave is plugged in securely. If not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure the control panel is programmed correctly and the timer is set.
- Check to ensure the door is securely closed, engaging the door lock system. If the door is not properly closed, the microwave will not operate.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.



HADEN

ESTD. ENGLAND 1958



HADEN
5 Wadsworth Rd
Perivale
UB6 7JD

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages